

992 GT3RS TENSION ARMS

Installation instructions

Rev 1.0 / 12-2024




CONTENTS

	Page
INSTALLATION INSTRUCTIONS	2
INSTALLATION INSTRUCTIONS – note to use correct side	4
INSTALLATION INSTRUCTIONS – note for GT3	5
INSTALLATION INSTRUCTIONS - adjustments	6
INSTALLATION COMPLETE	12

INSTALLATION INSTRUCTIONS

INSTALLATION STEPS:

1. Remove front under panel.
2. Remove lower air guide from knuckle.


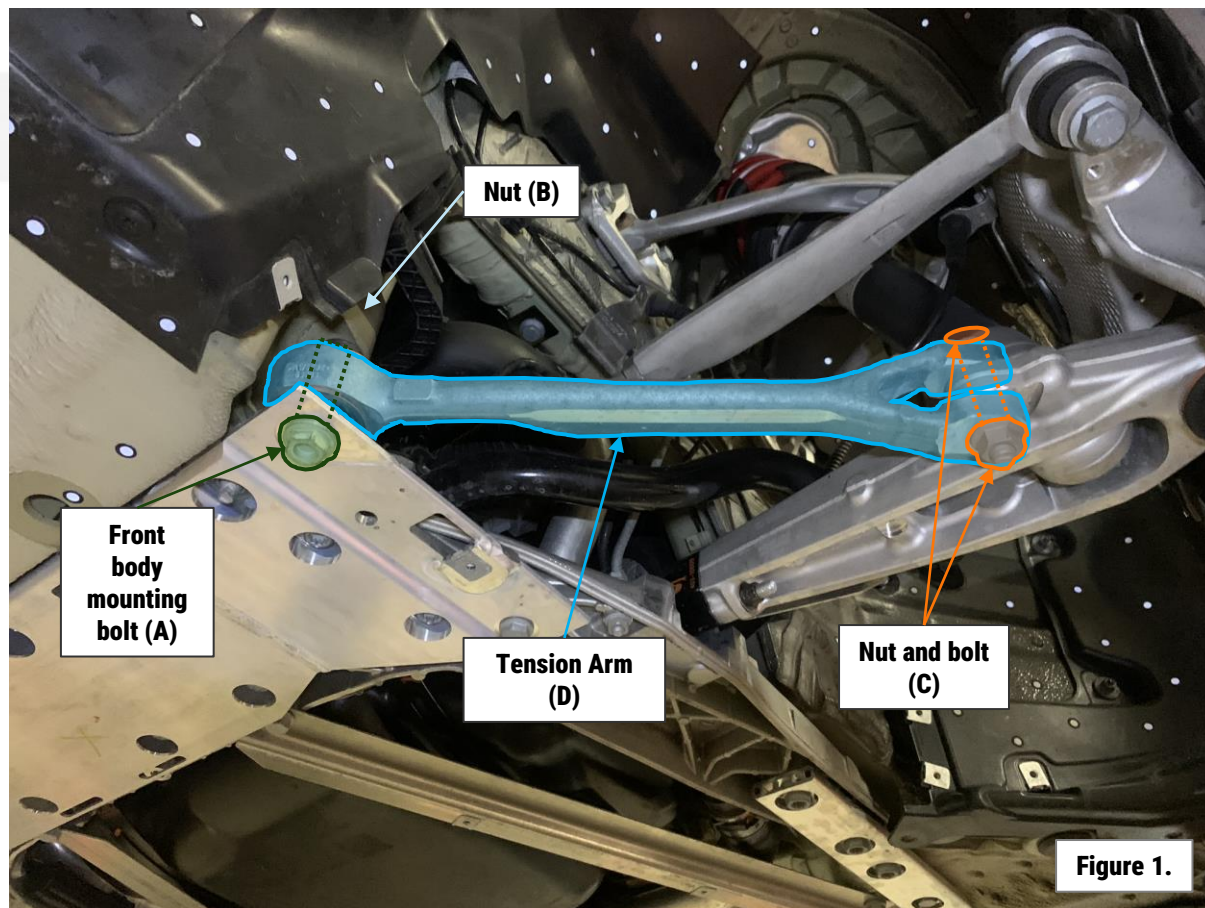


3. Remove front body mounting bolt (A – Figure 1.)
4. Loosen or remove the nut adjacent to the front body mounting bolt (B – Figure 1).
5. Remove the bolt and nut holding the tension arm to the LCA (C – Figure 1.)
6. Remove Tension Arm (D – Figure 1.)

INSTALLATION INSTRUCTIONS

INSTALLATION STEPS:

7. Install Dundon Motorsports Tension arm. (Make sure that arrow on the inner bearing side points upwards)

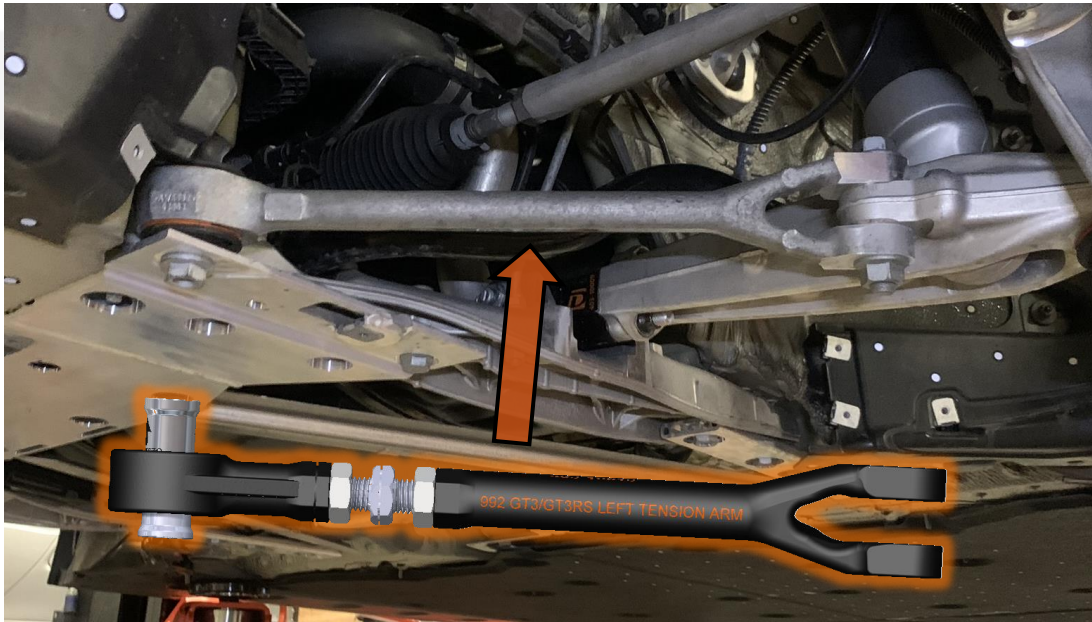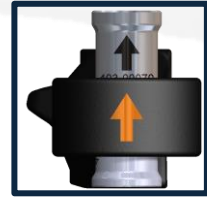

8. Put Bolt and nut (C – Figure 1.) to connect Tension Arm and LCA.

Torque to spec 100 Nm.



9. Put front body mounting bolt (A – Figure 1.) and adjacent nut (B – Figure 1.) back.


Torque to spec 120 Nm.



10. Assemble under panels as removed.

INSTALLATION INSTRUCTIONS – note to use correct side

NOTE: Pay attention as the arms are side specific (check Figure 2 and 3.)

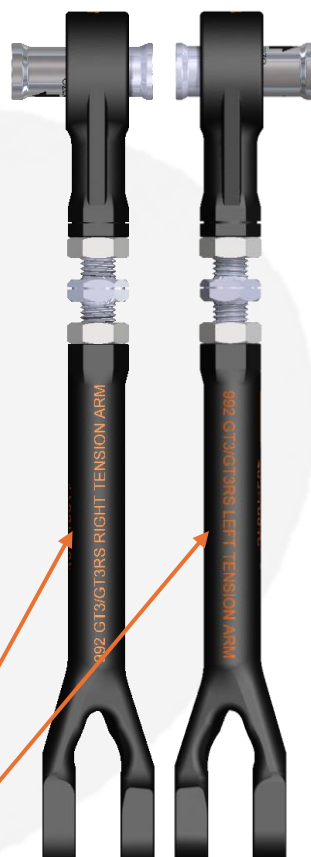

NOTE: Check correct side written on the tension arm.

LEFT



RIGHT

INSTALLATION INSTRUCTIONS – note for GT3

FOR 992 GT3 only:

Remove UPPER front spacer bushing (403-00070) and install shorter „GT3” bushing (403-00071).



992 GT3



992 GT3 RS

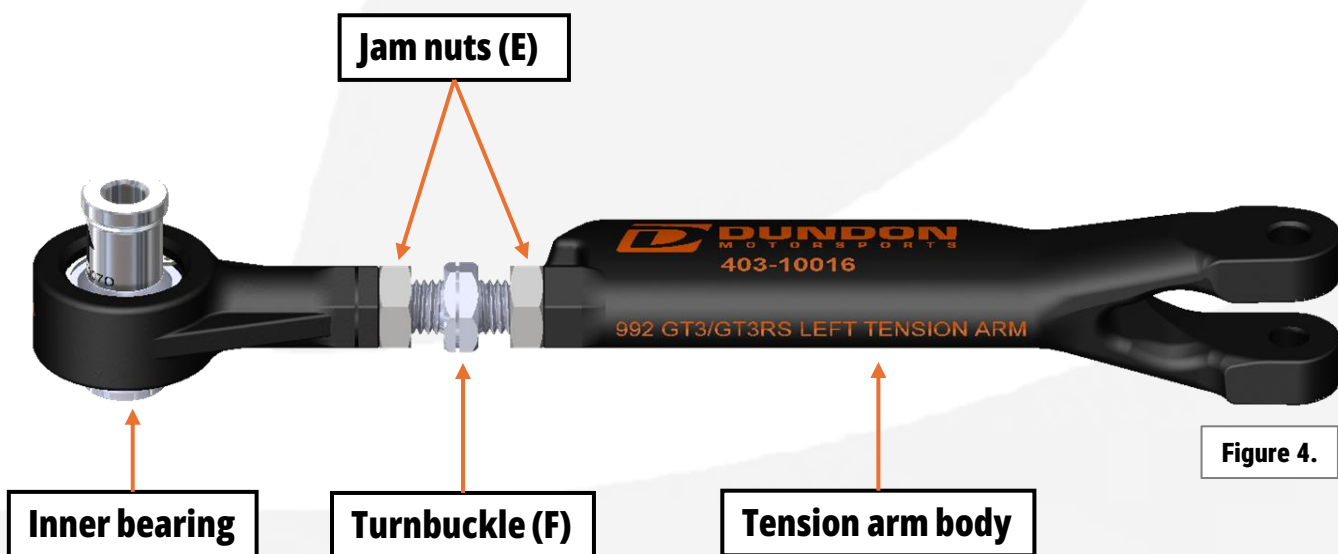


Figure 4.

INSTALLATION INSTRUCTIONS - adjustments

ADJUSTMENT of the Tension Arm:

1. Loosen Jam nuts (E – Figure 4.).
2. Turn center hex on turnbuckle (F – Figure 4.) to lengthen or shorten the tension arm.

! Pay attention to position of inner bearing or inner joint body. Make sure it is positioned level and centered before tightening. If the housing is not centered or level at ride height when tightened, damage can occur.

Correct:



Incorrect:



INSTALLATION INSTRUCTIONS

992 GT3 brake duct guide:

1. Cut cable ties and remove brake duct from OEM arm.



INSTALLATION INSTRUCTIONS

992 GT3 brake duct guide:

1. Install OEM brake duct on Dundon Motorsports arm with new cable ties.



INSTALLATION INSTRUCTIONS

More pictures of fitting brake duct (992 GT3) for reference:



INSTALLATION INSTRUCTIONS

More pictures of correct tension arm installation for reference:



INSTALLATION INSTRUCTIONS

More pictures of correct tension arm installation for reference:



INSTALLATION COMPLETE

You have successfully installed your 992 GT3 / RS Tension Arms.

In case of questions, you can contact us at:



www.dundonmotorsports.com



sales@dundonmotorsports.com



253-200-4454